



### **To Change Room Temperature Setting:**

1. Push display button - Set point will appear
2. Push either the up arrow or down arrow – Each time an arrow is pushed, it will change the Room Temperature by 0.1 °F
3. Push the Enter Button - To accept temperature setting

### **To Override Unoccupied:**

1. Push and Hold Override button for 5 seconds.
2. Adjust room temperature as indicated above.

### **To Switch between Actual Room Temperature and Temperature Setting:**

1. Push Display button

### **NOTES:**

1. Room temperature may vary within +/- 1.5°F from temperature setting.
2. The Select button is intentionally deactivated.